



# Disassembling Home Stereo and Theater Philips MCD288

This introduction shows how to open the main set of a Philips MCD288/???. It should be the same for all /??s. The front panel might get buckled a bit.

Written By: Philipp



## INTRODUCTION


This introduction shows how to open the main set of a Philips MCD288/???. It should be the same for all /??s. The front panel might get buckled a bit.

## Step 1 — Undo screws



- remove the 4 screws on the bottem of the main set


## Step 2 — Expose main latches

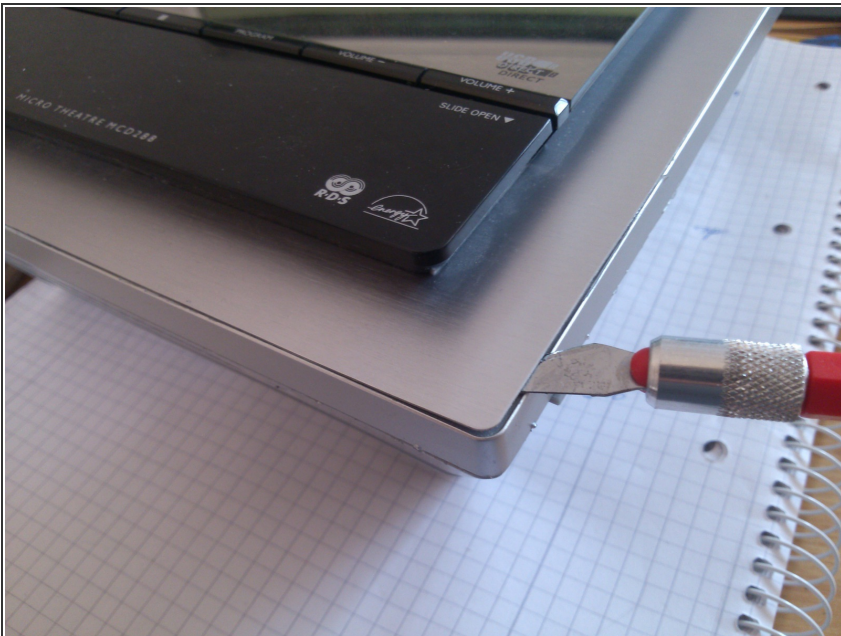

- Lift the aluminium pane at both sides with a knife




### Step 3 — Start with the bottom edges

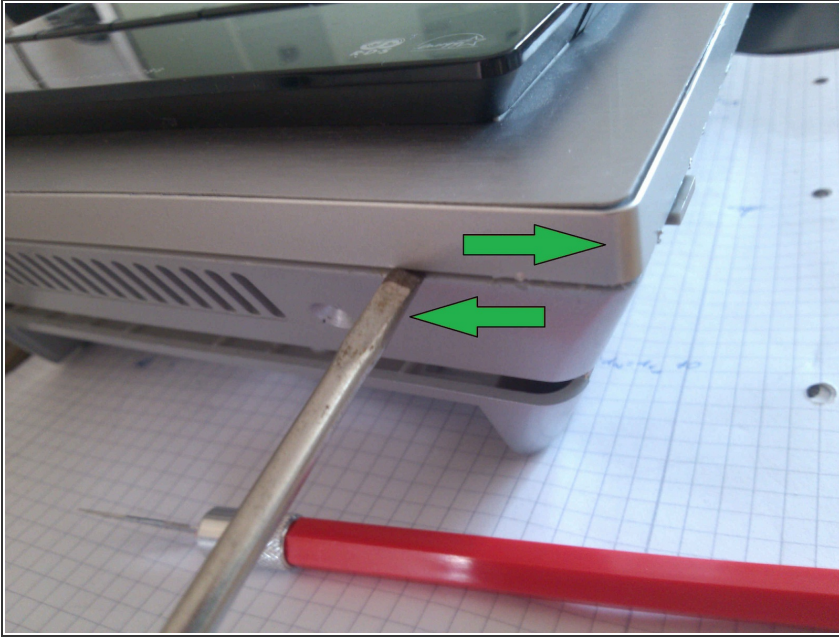



- To lift an edge, shift the front part at that edge towards the side while bending both parts apart (picture of the inside at step 5)
- hint: Start at the bottom, then continue with the sides according to step 4, because the bottom is only fastened by the screws of step 1, while the top has 3 extra latches (seen in step 5).

### Step 4 — Losen main latches

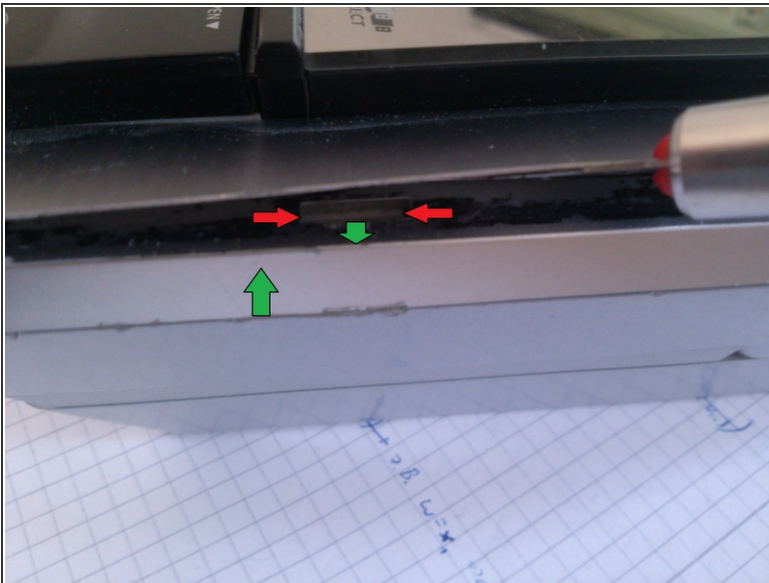

- To detach the sides, pull a main latch towards you and keep on lifting the top part further.
- repeat for three latches on each side.

## Step 5 — The inside

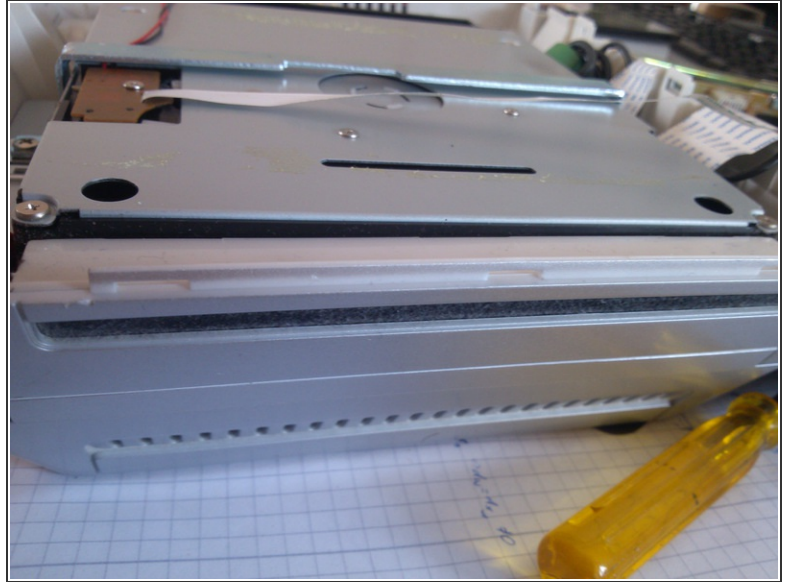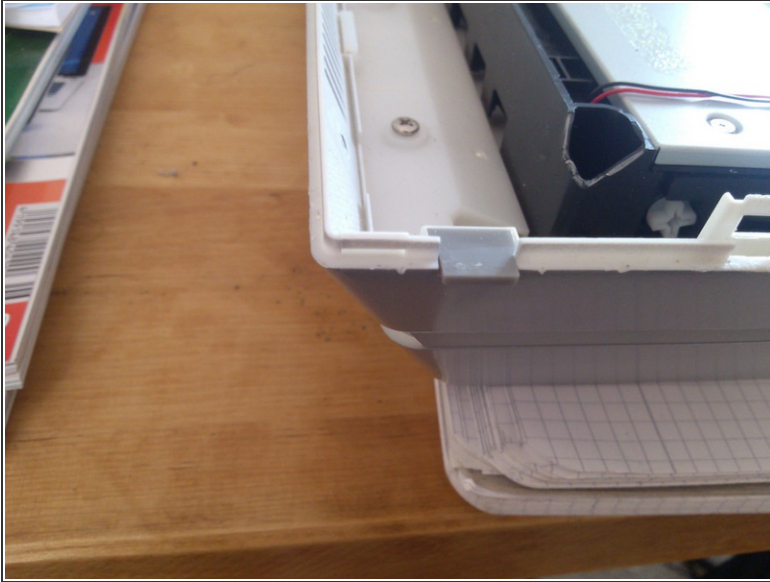

- These pictures show the latches on each edge and on the top of the set.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 09:08:25 PM.